




# 01 Crane

How to call tools From the SCP launcher → Click the "Crane" Icon



select the Crane Icon

How to use After setting the Crane Tool dialog, click any position on the screen to place the crane

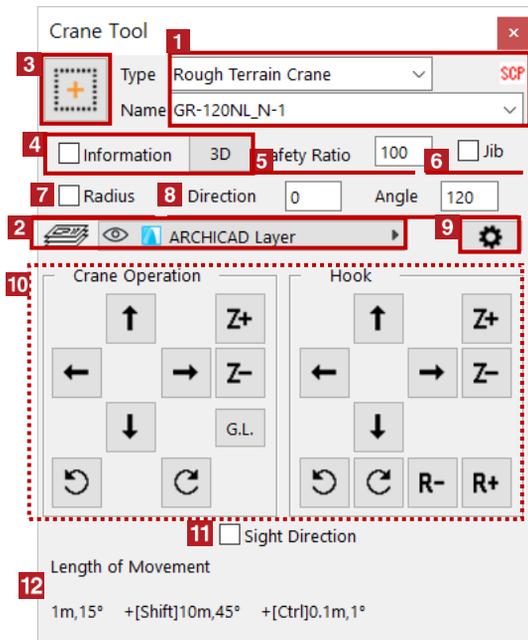


- 1 Choose Crane Type & Name
- 2 Choose the layer for this Crane
- 3 Use Place Icon  to position a Crane


< Other Dialog Setting >

- 4 Show / hide the crane information  
 3D The screen rotates according to the current viewpoint on 3D.
- 5 Setting the Safety Ratio  
- It will change the total rated load to be displayed
- 6 Show Jib Installation (depending on Crane type)
- 7 Show / hide crane working radius
- 8 Change working radius direction with an angle
- 9 Show & hide the Crane operation / Hook Dialog
- 10 Move and rotate the Crane and Hook by clicking the arrow
- 11  It can be moved or rotated relative to the Sight Direction on the 3D
- 12 Shows the amount of movement


4 Ex) Show / hide the crane information

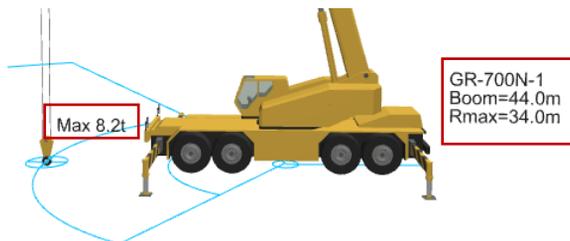

5 <Example of a safety ratio>

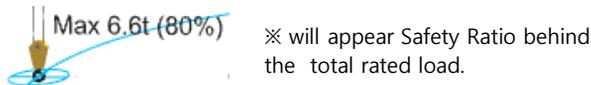




< 7 Show or hide the crane working radius with 8 Direction and Angle >

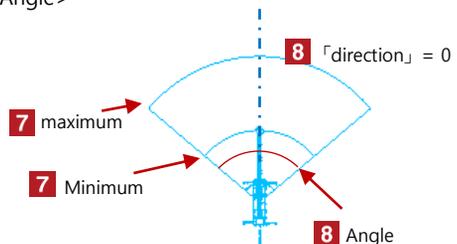



## Installation reference

The installation reference height of the crane is the bottom of the outrigger

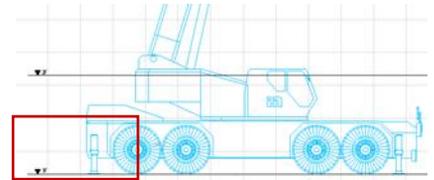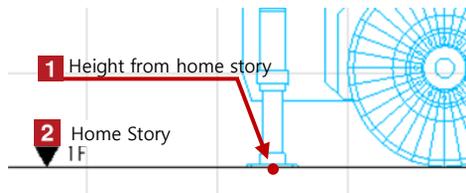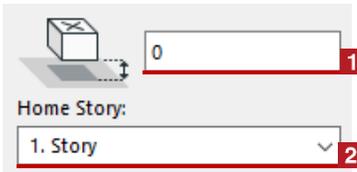


## Change crane posture

By clicking Hotspot, change such as hook position / height and boom length


Click the red Hotspot → The position of the crane can be changed by moving the vertex of the pet palette

Click the black Hotspot → You can move the crane with [Move] on the pet palette

▶ 3D

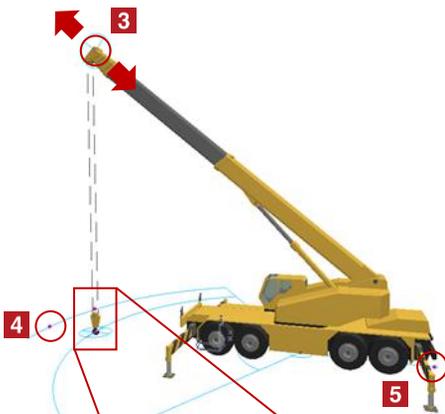


▶ 2D

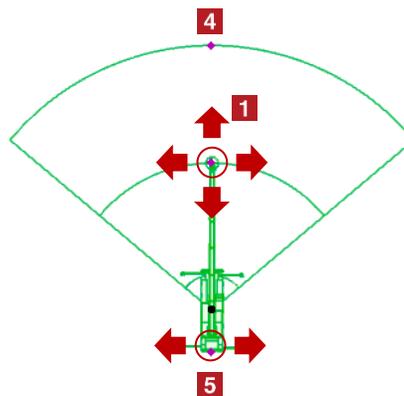

- 1** Change of hook position (position of suspended load)
- 2** Change Hook height
- 3** Changing the length of the boom
- 4** Change center line of working radius
- 5** Rotation of car body

Zoom in


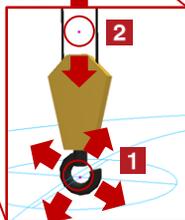






## Object settings

Select the crane and change various settings with "Object setting (Ctrl + T)"


### 【 Other Settings for Rough Terrain Crane and All-terrain crane 】

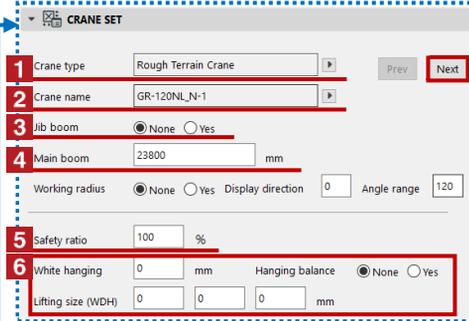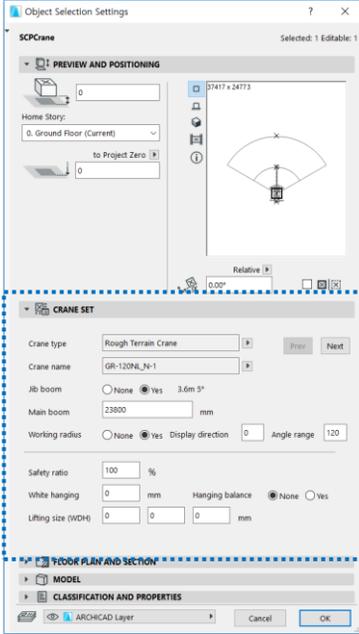

Next Click to next pages

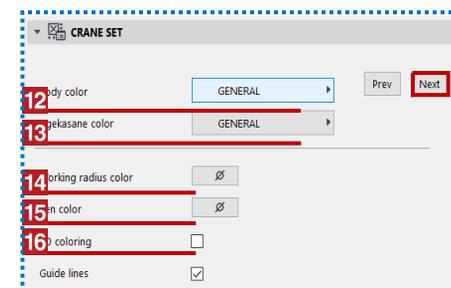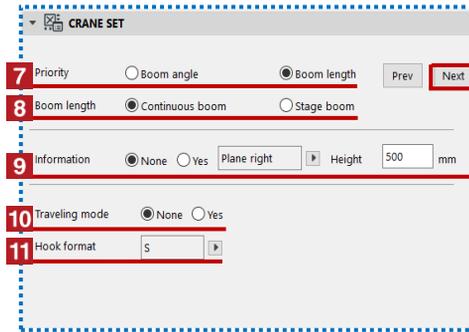

- 1 Select crane type
- 2 Select crane name
- 3 On / Off of jib boom (depending on model)
- 4 Set main boom length
- 5 Set safety factor rate
- 6 Show lifting objects  
When the size of the lift is set, the lifting object is displayed.


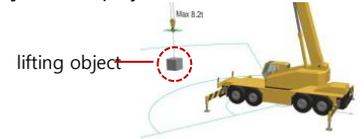


- 7 Set priority  
Boom angle: Fix the angle and change the boom length when moving the hook  
Boom length: Fix the boom length and change the angle when moving the hook
- 8 Set boom length  
Continuous boom: Regardless of the stage of the boom  
Step boom: Adjust for each boom stage  
※ Can not choose step boom in the case of a boom angle
- 9 Change the information of display direction
- 10 Folding Boom-Outrigger  
[Yes] Checked, Boom and outrigger are folded and changed into the state at the time running
- 11 Select hook type
- 12 Edit body Color
- 13 Edit lift weight color
- 14 Color setting of crane on 2D screen
- 15 Working radius display color setting
- 16 Color car body on 2D screen




## 【 Various settings of crawler crane / tower crane 】


Only the 2nd page of the crawler crane / tower crane will change the setting item

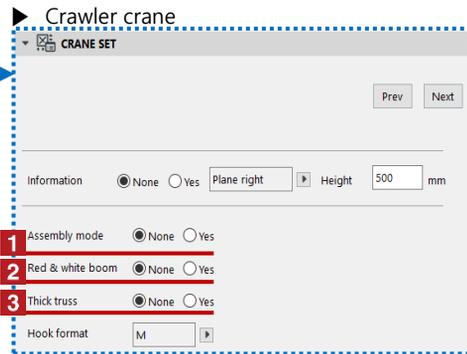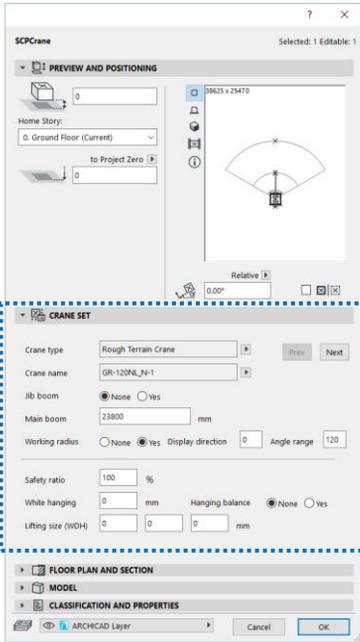

- 1** Change boom ground state (assembly mode)
- 2** Change color to red and white boom
- 3** Change display to thick truss (If you want to highlight the truss)

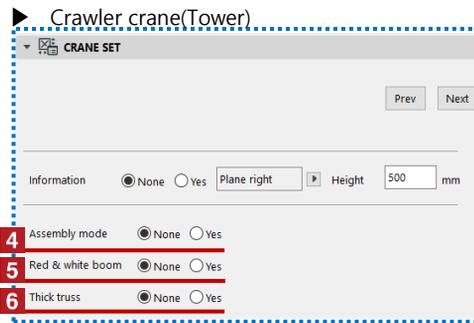

- 4** Change boom ground state (assembly mode)
- 5** Change color to red and white boom
- 6** Change display to thick truss (If you want to highlight the truss)

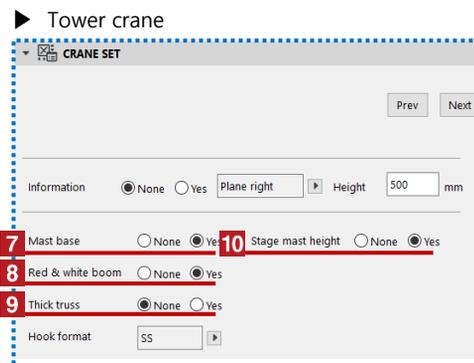

- 7** Setting of Mast base
- 8** Display switching to red and white boom
- 9** Display switching to thick truss (When you want to make the truss stand out)
- 10** Switching of the stage mast