




07 Ground Anchor

How to call tools From the SCP launcher → Click the "ground anchor" icon




Select the ground anchor icon




How to use After selecting the layer, click any position on the screen to arrange the ground anchor .

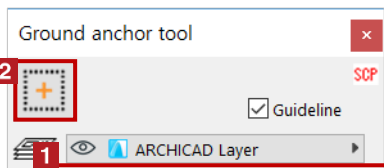

- 1 Select the layer to place
- 2 Click , and place ground anchor at an arbitrary position.


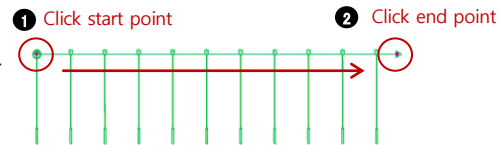


Installation reference The ground reference height of the ground anchor is the center of the anchor pedestal

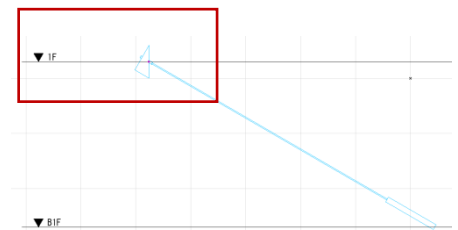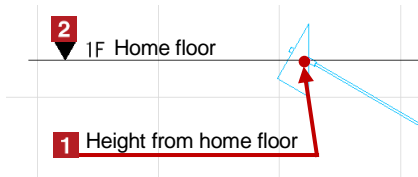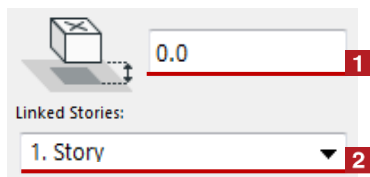

Change start / end position Clicking Hotspot to move the start and end points of the ground anchor

Click the red Hotspot → You can change the position of the start and end points of the ground anchor by moving of the pet palette

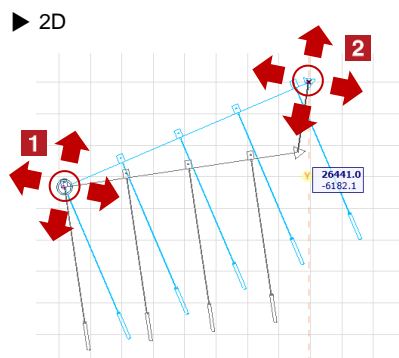
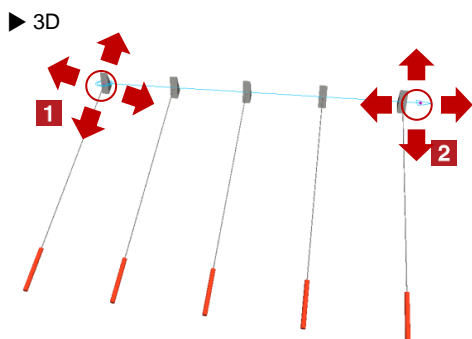


- 1 Changing the position of the starting point
- 2 Changing the position of the end point




Object setting

Select the ground anchor and change various settings with "Object setting (Ctrl + T)"

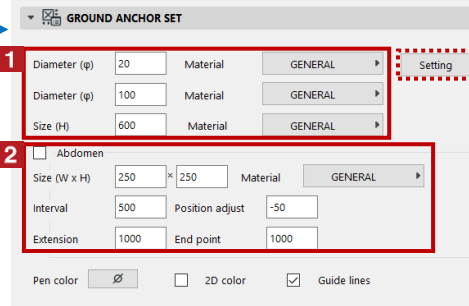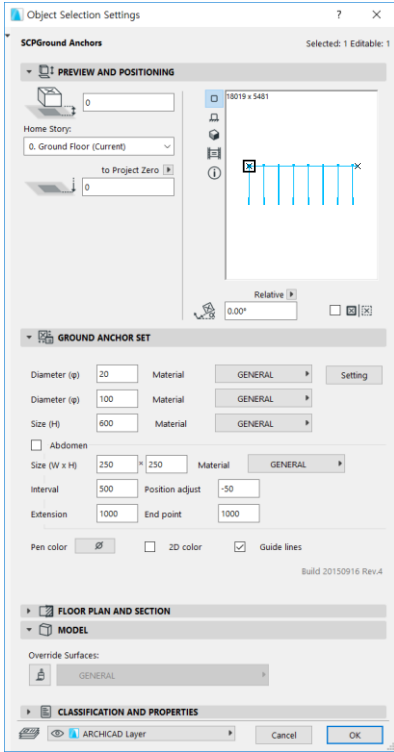


Setting Click to switch to the number of columns and the specification setting screen of each stage

Specify the number of stages (max 7 stages)

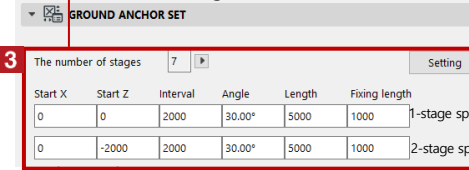


Installation level
Offset from starting point

1 Anchor specification setting (common)

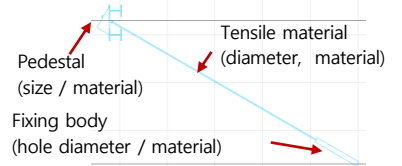

2 Display setting of anchor

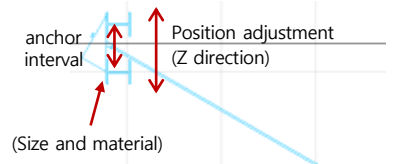

3 Specification setting of anchor (each stage individually)

