



08 Road Deck


How to call tools From the SCP launcher → Click the "Road Deck" icon




Select the Road Deck icon

How to use

After selecting the layer, click any position on the screen to place the road deck.

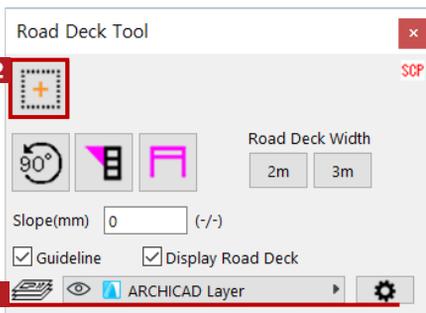


- 1 Select the layer to place
- 2 Click  and then place road deck at an arbitrary position

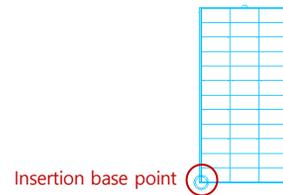



※ The new arrangement is created with the default size.


How to edit


You can change the placement and specification etc. of the created road deck.

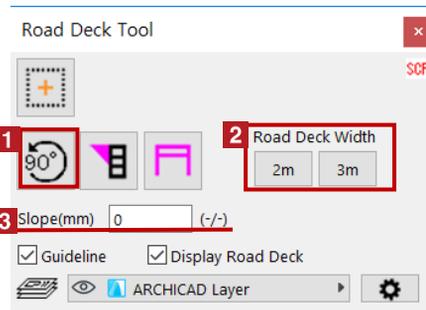

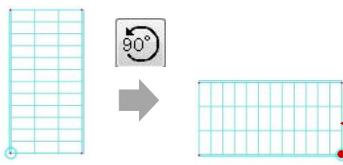- 1 Road deck rotation
After selecting the placed road deck, click 
Select deck
 ※ Rotate based on insertion base point

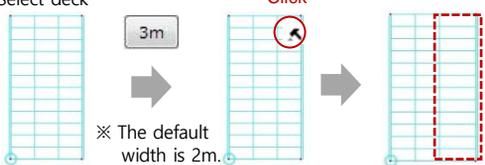- 2 Changing road deck width
Select the placed deck, specify the deck width (2 m, 3 m), then click the column you want to change
Select deck
 Change
※ The default width is 2m.

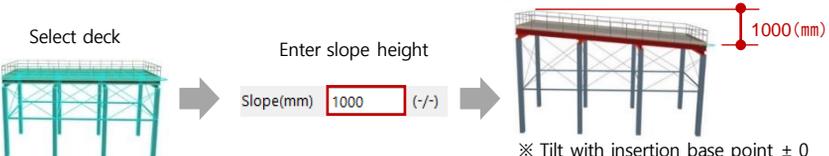- 3 Changing slope value
Select the deck that you placed and enter the tilt height
Select deck
Enter slope height
 ※ Tilt with insertion base point ± 0

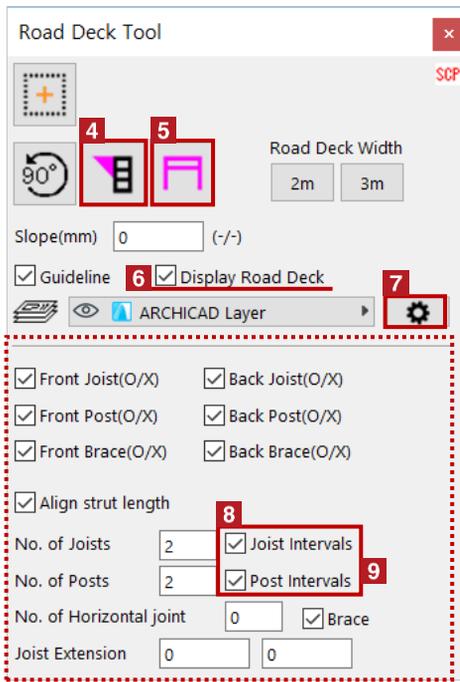

4 Add corner deck

Select the deck you placed and click , then click Hotspot at the corner where you want to add the corner deck

Select deck



※It is possible to erase the corner deck added by the same operation.

5 Delete handrail

Select the deck you placed and click , then click on the handrail you want to delete.

Select deck



※It is possible to add a handrail deleted by the same operation.

6 Switching display / non-display of deck plate

It is useful when you are editing a post, strut, brace etc.

▶ 2D



▶ 3D



< Other dialog box >

7 Setting the expansion of deck plate



Click  to expand 

8 Individual setting of joist interval and post gap

Hotspot will be displayed and individual editing of the post interval will be possible (edit in 2D)

9 Individual setting of post length



Hotspot will be displayed and individual editing of the post length will be possible (edit in 3D)

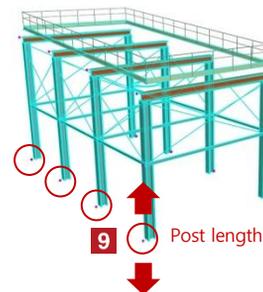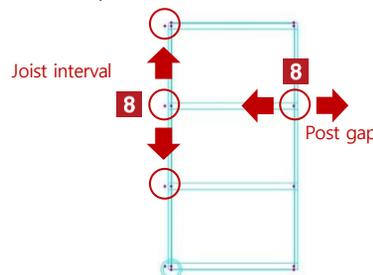



Installation reference

The installation reference height of the road deck is the top end of the deck plate.

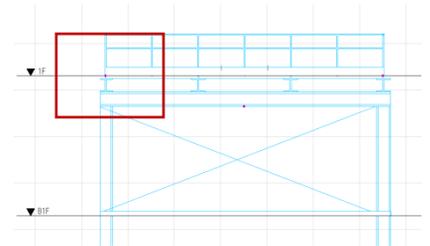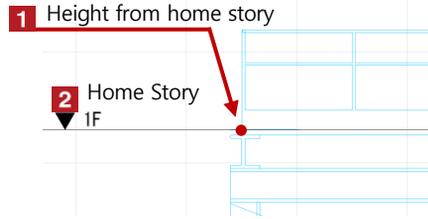


Change area and post length of road deck


Clicking Hotspot to change the area and length of road deck.

Click the red Hotspot → You can change the position of the post by moving the vertex of the pet palette

► 2D

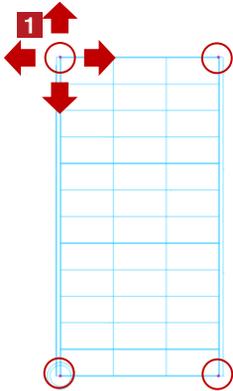




► 3D

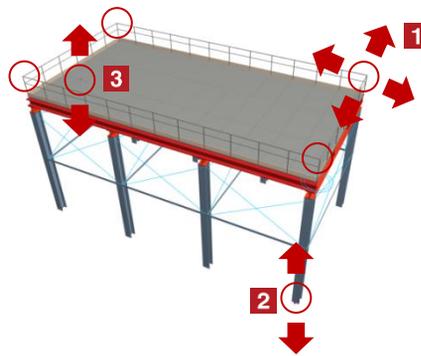

- 1 Change the area of the road deck (deck plate number)
- 2 Change the length of posts
- 3 Change slope

Object setting

Select the road deck and change various settings with "Object setting (Ctrl + T)"

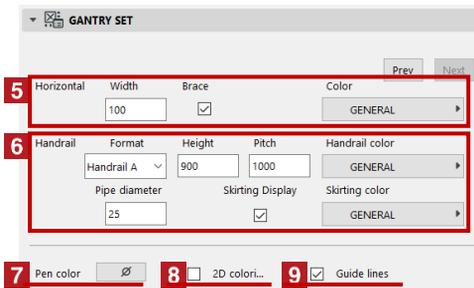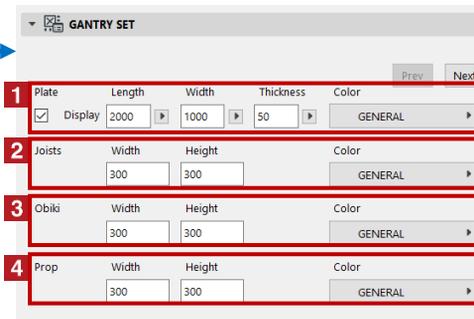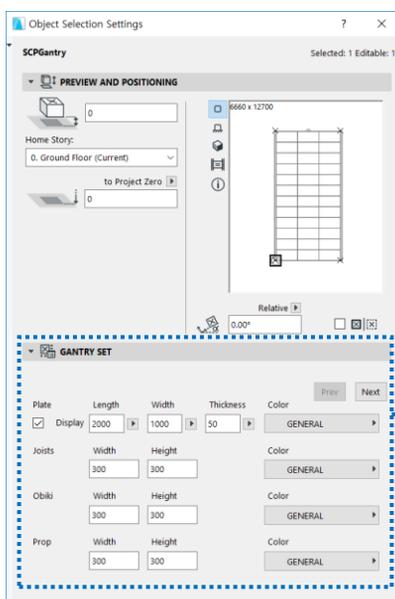

- 1 Setting lining plate
- 2 Setting joists
- 3 Setting post interval
- 4 Setting post
- 5 Setting brace
- 6 Setting handrails
- 7 Drawing color setting of gantry on 2D screen
- 8 Coloring of the gantry on a 2D screen
- 9 Change display of guide line