



12 Coordinate display

How to call tools From the SCP launcher → Click the "Coordinate display " icon




Select the coordinate display icon


How to use

After setting each item, the coordinates of an arbitrary point on the screen are displayed.


The coordinate display tool is a function to display 3D coordinate values based on preliminarily prepared origin as a 3D and 2D.

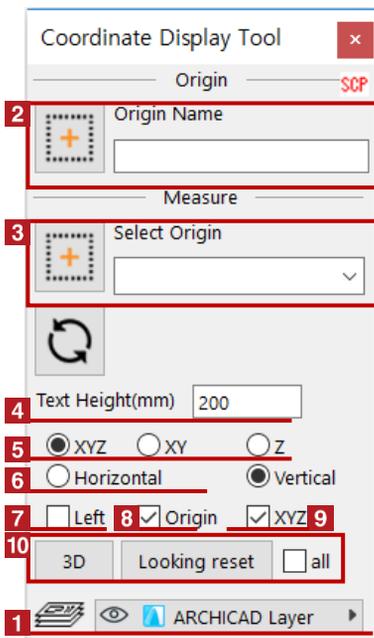

- 1 Select the layer to place
- 2 Enter any origin name (example: origin 02), click , and place the origin at an arbitrary point
- 3 After selecting the placed origin name, click the , and display the station coordinates at an arbitrary point

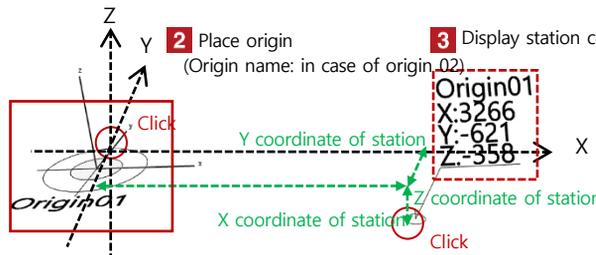

- ※ 8 When you enter , the origin name is displayed.
- ※ 3 If you select a blank when selecting the origin of the station, the station coordinates for the origin of ARCHICAD are displayed.

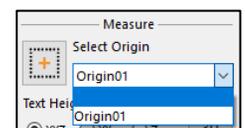


< Other dialog setting >

- 4 Setting of font size to be displayed
- 5 Select coordinate system to display
- 6 The choice of coordinate display direction
- 7 Display position change of the coordinate object
 - Displays the coordinate object on the left side with respect to the blow-out line end point of the put (the default is on the right)
- 8 Display and non-display switching of origin name to the survey point coordinates
 - When put, origin name appears in the survey point coordinates
- 9 Display and non-display switching of XYZ to the survey point coordinates
 - When put, it appears XYZ is to survey point coordinates
- 10 Rotation of the display to match the current point of view (3D only)
 - When you click, displayed according to the current point of view on 3D will rotate



How to edit

You can change or update the display contents of the placed station coordinate object

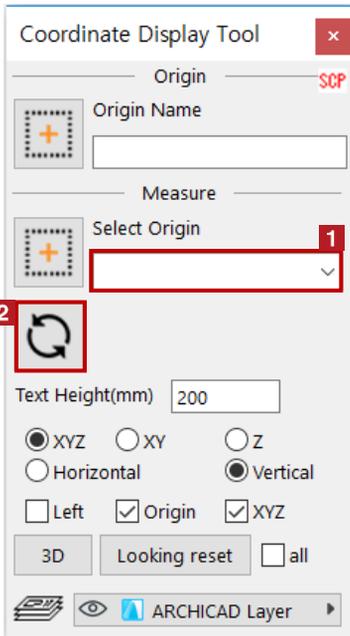

1 Changing the target origin


Select the station coordinate object and change the origin

Select the station coordinate object

Origin01
X:3266
Y:-621
Z:-358



Change the target origin


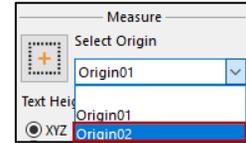


Origin02
X: -6258
Y: -10451
Z: -358

Change

2 Updating the calculation result after moving the origin

After moving the origin, clicking , will recalculate all the station coordinate values targeted at the moved origin

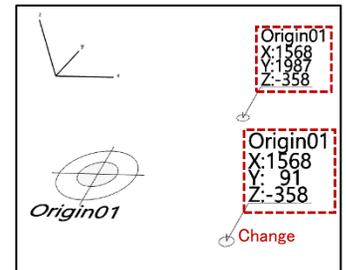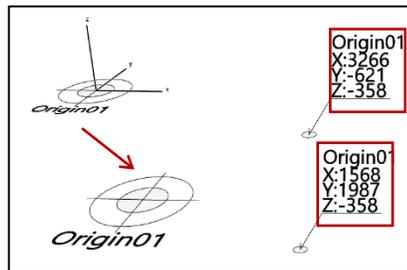

※ Coordinate values are recalculated automatically when moving the object of the station

Installation reference

The installation reference of the coordinate object is the position clicked at the time of placement.

The placement floor will be 「Floor」 if created in 2D, 「1F (Floor number = 1)」 if created in 3D

< Display example of origin >

▶ 2D

▶ 3D



< Display example of station coordinates >

▶ 2D

▶ 3D

